


Sting PRO Default Button Assignments

P1START 1
P1COIN 5
P2SW7
ESCAPE



P1 UP
UP
P1 LEFT
Left
P1 RIGHT
Right
Down
8-way joystick
P1 DOWN
Left Mouse Button
Right Mouse Button


P1SW1 7
P1SW2 H
P1SW3 9
P1SW4 0
P1SW5 Z

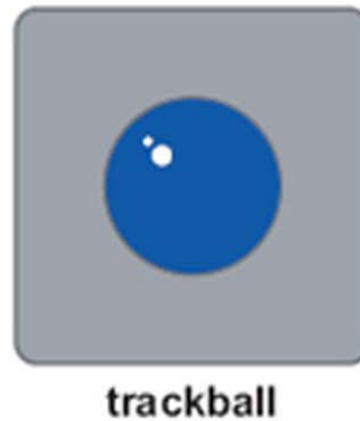

Spinner
or P2SW8 if no spinner

ENTER
P1SW6

P2START 2
P2COIN 6

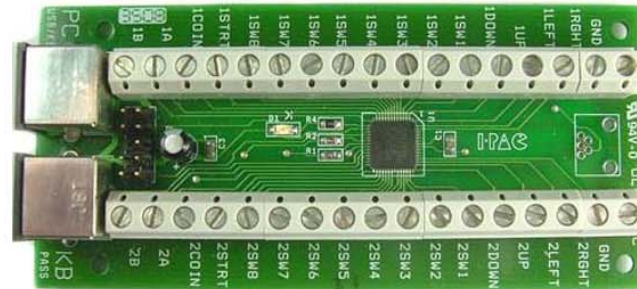

2002-
Button layout copyright (c) 2007
DreamAuthentics