




Top 15 Video Game Default Button Controls

Match the game with the button combination to see what the default controls work each game.

***Note:** You can change any button in any game. For detailed instructions consult our other game training materials.

ATARI Games

<http://www.dreamauthentic.com/atariquickstartguide.pdf>

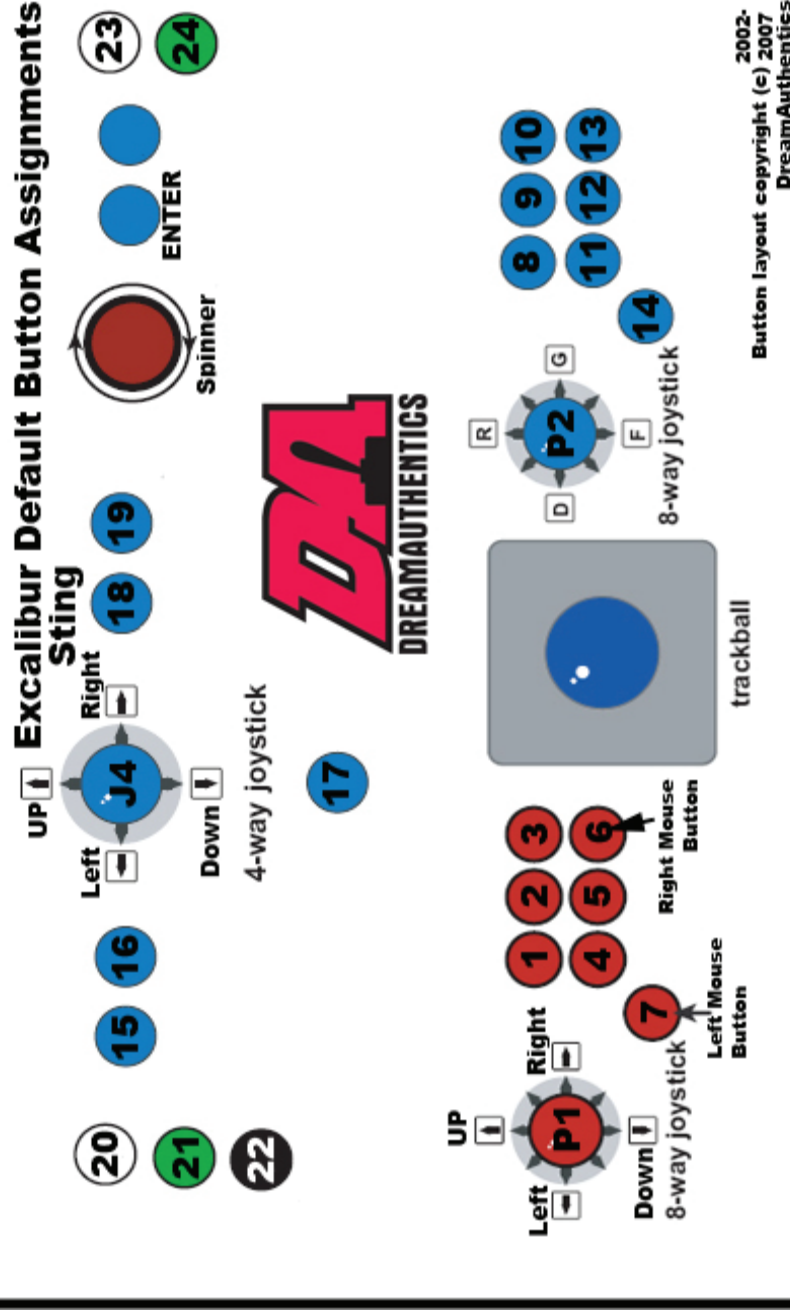

GAME		FIRE/ ACTION	MOVE	FIRE/ ACTION			MOVE
GAME		FIRE/ ACTION	MOVE	GAME			MOVE
Centipede:		5, 6, 7	T = Trackball	Pac Man:	N/A	J4 = 4 Way Joystick	
Tempest:		7 or 17	S = Spinner or Trackball 19 = Super Zapper	Ms. Pac Man:	N/A	J4 = 4 Way Joystick	
Missile Command:		8, 9, 10	T = Trackball	Galaga:	19	J4 = 4 Way Joystick	
Asteroids:		18	15, 16 = Left/Right 19 = Thrust; 17 = Hyperspace	Galaxian:	19	J4 = 4 Way Joystick	
Super Breakout:		17	S = Spinner or Trackball	Dig Dug:	19	J4 = 4 Way Joystick	
Asteroids Deluxe:		18	15, 16 = Left/Right 19 = Thrust; 17 = Hyperspace	Rally X:	19	J4 = 4 Way Joystick	
Crystal Castles:		5, 6, 7	T = Trackball	LEFT MOUSE CLICK	7	RIGHT MOUSE CLICK 6	
Millipede:		5, 6, 7	T = Trackball	P1/P2 ADD CREDITS	21/24	P1/P2 START GAME 20/23	
Dragon's Lair I & 2:		17	J4 = 4 Way Joystick	ESCAPE/QUIT GAME	22		