




**DreamAuthenticics Support Operation:
Swap out PCB to repair trackball only working in one Axis
(Customer Field Repair)**

STEP 1:

Remove trackball from your game cabinet by unscrewing bolts that secure trackball to control panel. You may keep the **MOUSE WIRES** (left and right click) hooked up OR notate where they are plugged in before unplugging them. There are 2 wires.

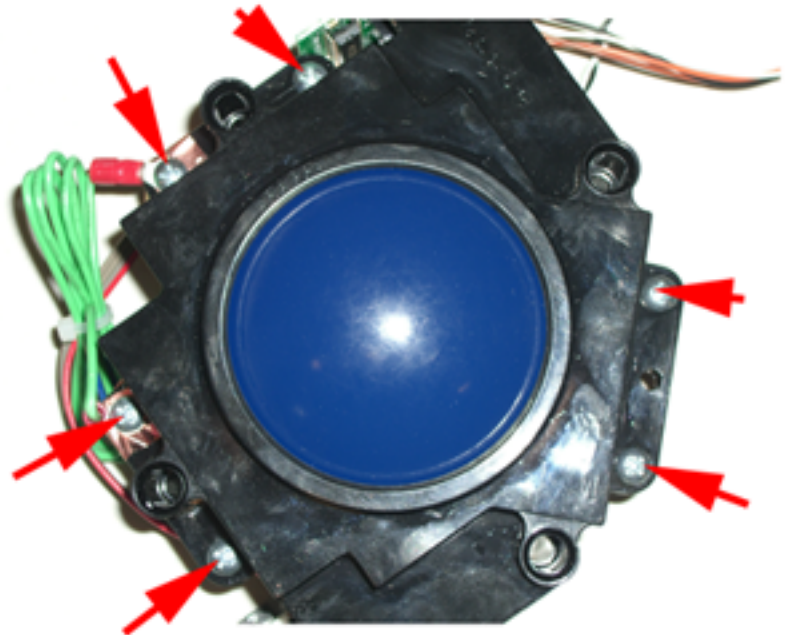

STEP 2:

Once trackball is out of cabinet use a **PHILIPS** screwdriver and unscrew 6x screws. **NOTE:** You **DO NOT** have to take the screws all the way out - just **LOOSEN** them

STEP 3:

Locate the replacement trackball X/Y Axis PCB we sent you (see diagram) and **UNPLUG THE 2 WIRES** that are plugged in to the PCB ON THE TRACKBALL PCB (the defective one).



Trackball replacement PCB

STEP 4:

Remove old/defective PCB from the trackball and put the new PCB in its place. **NOTE:** make sure it is lined up the same way like picture. **ALSO** just **LOOSEN** the screws on step 1 you don't have to take them **OUT**. Make sure PCB is firmly in place, plug in wires, tighten 6x screws and put trackball back in place.

